


INSTRUCTION MANUAL WT 498

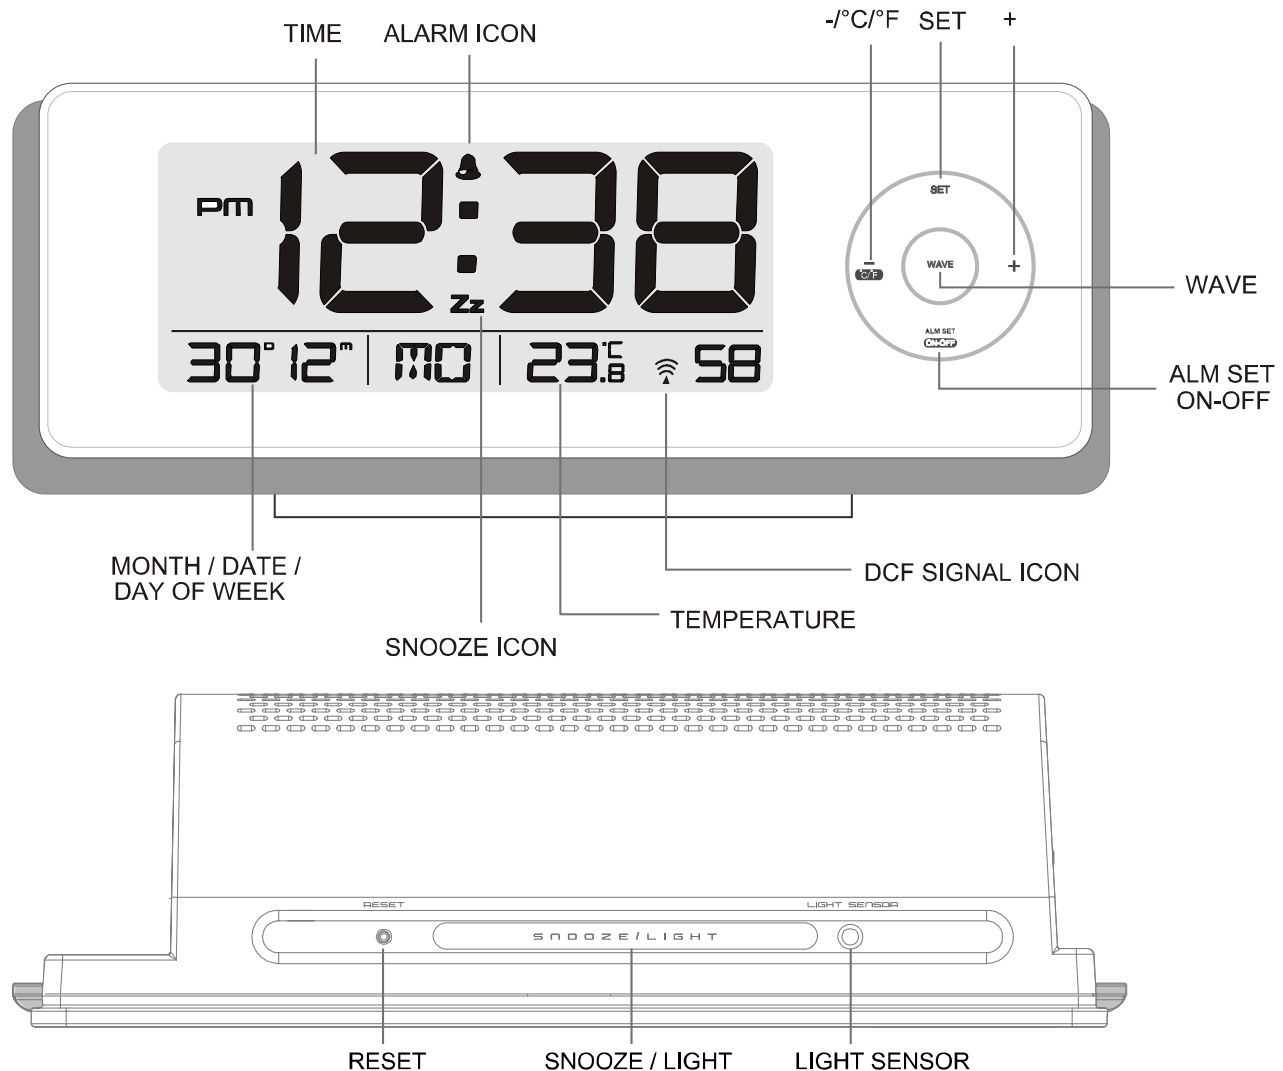


INSTALLATION BY AC-ADAPTOR




For best reception of radio controlled signal, keep your clock close to a window and away from metal surfaces, electrical appliances and magnetic fields. Plug the AC/DC adaptor to an AC household outlet, then plug the DC jack to the back of the clock. Your clock is ready to work for you.

INSTALLATION BY BATTERIES

1. Slide open the battery cover at the bottom of your unit.
2. Insert 3 x AAA batteries into the battery compartment by observing the correct + / - polarity signs inside the battery compartment.
3. Replace the battery cover.
4. In case it is too bright in night time, please only use by batteries / without adaptor.
When only batteries are being used, the always-on backlight is off. Press SNOOZE/LIGHT will light up the LCD for few seconds to view time if need. If user unplugs the DC jack, the clock will stop to work and no time / alarm. Please remember to put batteries in the clock if user wants to unplug it.

DCF SINGAL RECEPTION AND SIGNAL INDICATOR

After your clock is powered up, it starts to receive DCF signal. The  icon flashes.

| | |
|-----------------------------|--|
| Weak or no DCF signal | (only ▲ icon flashing) |
| Receiving strong DCF signal | ( icon flashing) |
| Successful Reception | ( icon becomes static) |
| Failed Reception | ( icon disappear) |

Automatic reception and Manual Reception

Your clock starts automatic reception everyday at 1:00, 2:00, 3:00. If it fails to receive the DCF time signal at 3:00, it will start reception at 4:00. If it fails again it will start reception at 5:00. If it fails again it will start automatic reception at 1:00 again next day.

Manual reception : simply press WAVE button once to start manual reception. Press and hold 2 seconds to stop manual reception.

Remark : when your clock is receiving radio controlled time signal, all buttons except the snooze / light button do not work.

TO SET CALENDAR, 12/24 TIME AND TIME

1. Press and hold SET for 2 seconds, time digits change to “24 Hr” and flash, press +/- to select “12 Hr” time format or “24 Hr” time format.
2. Then press SET once again, time digits change to “00” and flash. Press +/- button to select time zone:

“00” = GMT +1 hour (e.g. Germany)
“01” = GMT +2 hours (e.g. Finland)
“-01” = GMT 00 hour (e.g. U.K.)
3. Then press SET once again, hour digits flash. Press +/- button to set hour.
4. Then press SET once again, minute digits flash. Press +/- button to set minute.
4. Then press SET once again, time digits change to year “2009” and flash. Press +/- to set the year.
5. Then press SET once again, month digits flash. Press +/- button to set month.
6. Then press SET once again, date digits flash. Press +/- button to set date.
7. Then press SET once again, day of week digits flash. Press +/- button to select the language of day of week.

EN = English
GE = German

FR = French
IT = Italian
NE = Dutch
ES = Spanish
DA = Danish

8. Press SET to return to normal mode, or it will return to normal mode in around 30 seconds if no press of any other buttons.


TO SET ALARM TIME

Press and hold ALM SET / ON-OFF once, time digits change to alarm time digits "0:00 AL" and hour digits flash. Then press +/- to set your desired hours of alarm time.


Press ALM SET / ON-OFF once, alarm minute digits flash. Press +/- to set your desired minutes of alarm time.


Press ALM SET / ON-OFF once to return to normal mode, or it will return to normal mode in around 30 seconds if no further press of any other buttons.

TO TURN ON OR OFF YOUR ALARM

Press ALM SET / On-Off once to turn on or off the daily alarm. When the alarm function is turned on, the  icon appears between the hour and minute digits.

TO USE SNOOZE ALARM

When time reaches your set alarm time, your clock will give beep sound to wake you up. The  icon will flash.

- 1) Press SNOOZE on the top once to stop the alarm temporarily, the "Bell" and "Zz" icon keep flashing. The alarm will beep again in 5 minutes.
- 2) To stop the alarm, press ALM SET / ON-OFF once, the alarm beep will stop and the  icon become static, alarm will beep again same time next day.

Alarm Duration : 2 minutes

AUTOMATIC LIGHT SENSOR

Your clock is equipped with an automatic light sensor on top right next to the snooze / light button. The brightness of backlight will be adjusted to lower level when your room environment is dim.

Please keep your clock at least 1-foot distance away from any objects on top.

TO DISPLAY TEMPERATURE IN °C OR °F

Simply press – (°C/°F) to display temperature in °C or °F.

TROUBLE SHOOTING

In case your clock shows irrelevant information or digits, it maybe affected by electrostatic discharge or interferences from other devices. Press the RESET button on the top of your clock. Your clock will be reset to default setting of time and calendar and it will start to receive radio controlled time signal again.

CARE OF YOUR RADIO CONTROLLED CLOCK

1. Do not expose the unit to extreme temperature, water or direct sunlight
2. Avoid contact with any corrosive materials
3. Do not subject the unit to excessive force, dust or humidity
4. Do not open the inner back case or tamper with any components of this unit

SPECIFICATIONS

| | |
|------------------------|------------------------------------|
| Indoor Temp. Range | -10°C to +50°C (+14.2°F to +122°F) |
| Temperature Resolution | 0.1°C |
| Alarm Duration | 2 minutes |